
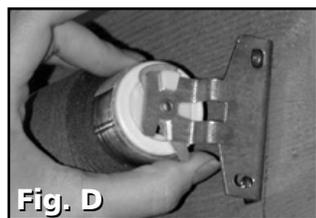
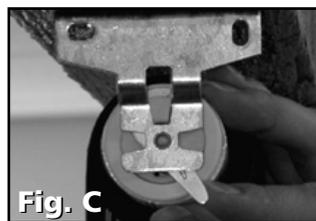
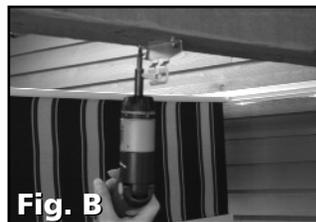



Shade/Privacy Blind Mounting Instructions

For mounting in the SIDE or BOTTOM
of a WOOD structure

- 1** Keep plastic wrap on shade until installation is complete.
- 2** Position the bracket (A) on the wood structure where you would like the pull-chain. Using the provided screws, attach the bracket to the wood with the flat side facing out (Figure A)
- 3** Measure 62" (for 60" blind), or 48-1/2" (for 46" blind) from the outside of bracket (A) and make a mark with a pencil.
- 4** Position the outside of bracket (B) next to the mark that was made in step 3. Using the provided screws, attach the bracket to the wood with the flat side facing out (Figure B)
- 5** Once you have the brackets in place, slide the chain side of the shade into bracket (A). Slide the other side of the shade into the top notch on bracket (B). Push the handle of the hook until it locks the slide notch into place. (Figure C) If you are mounting on the side, you put the shade into the top notch and lock the handle. (Figure D)
- 6** Remove plastic wrap from shade.

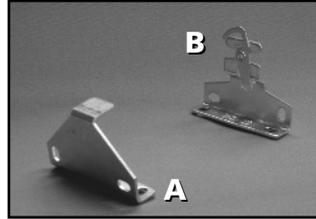

IMPORTANT

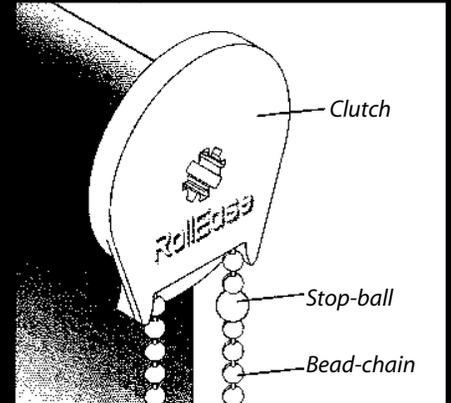

Please **DO NOT** remove the stop-balls or try to pull or force the stop-balls through the clutch mechanism as damage will result.

PLEASE NOTE: Blinds are vulnerable to wind and may cause damage if left unattended during strong wind. Therefore they are limited by a 1 year warranty. To extend the life of your blinds, roll them up when not in use. Blinds are adjustable to pull down to 72" to give you sun protection and privacy. The bead chain has two stop-balls attached which are too large to pass through the clutch mechanism. One stop-ball is attached to prevent the shade from being lowered too far and the other stop-ball prevents the shade from being raised too far.