


CLM POST ASSY


LEFT CORNER w/MEDITERRANEAN KIT

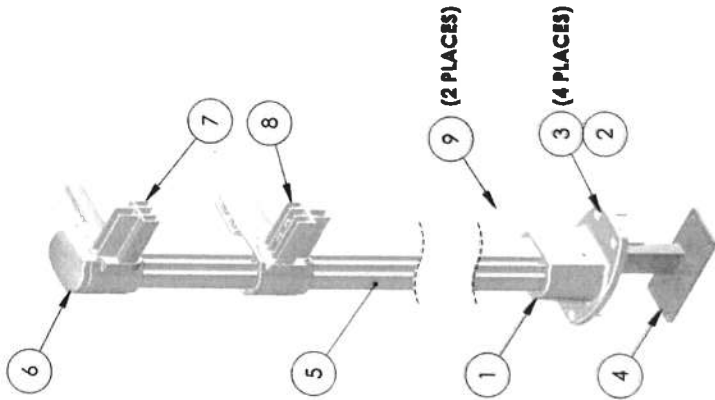

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	ASP008	Capri- Post Base Bracket	1
2	F044	Capri- Post Base Concrete Screw	4
3	F046	Capri- Post Base Wood Screw	4
4	AS060	Post Anchor for Capri	1
5	S028	Al Track 3" Capri	1
6	P007	Capri- Track Cap	1
7	ASP001	Capri- Left Corner	1
8	ASP002	Capri- Right Corner	1
9	F045	Capri Post/Reinforce Screw	2

CPM POST ASSY


RIGHT CORNER w/MEDITERRANEAN KIT

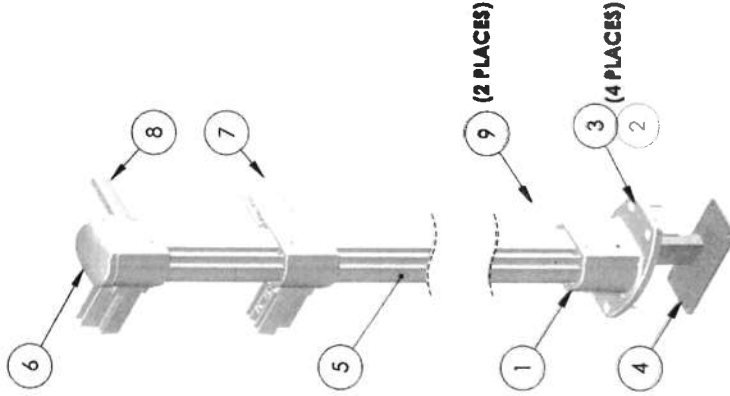

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	ASP008	Capri- Post Base Bracket	1
2	F044	Capri- Post Base Concrete Screw	4
3	F046	Capri- Post Base Wood Screw	4
4	AS060	Post Anchor for Capri	1
5	S028	Al Track 3" Capri	1
6	P007	Capri- Track Cap	1
7	ASP001	Capri- Left Corner	1
8	ASP002	Capri- Right Corner	1
9	F045	Capri Post/Reinforce Screw	2

CRM POST ASSY

LEFT CORNER w/MEDITERRANEAN KIT

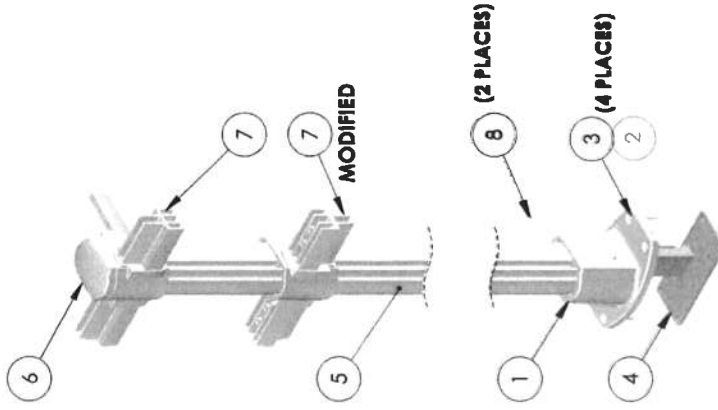

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	ASP008	Capri- Post Base Bracket	1
2	F044	Capri- Post Base Concrete Screw	4
3	F046	Capri- Post Base Wood Screw	4
4	AS060	Post Anchor for Capri	1
5	S028	Al Track 3" Capri	1
6	P007	Capri- Track Cap	1
7	ASP003	Capri- Mid Post Corner	2
8	F045	Capri Post/Reinforce Screw	2

CAPRI POST

SHEET 1 OF 2